

Triex LLC


157 Pioneer Center
Montpelier, VT 05602



Temperature Controller How To

This document outlines how to set and change the temperature on the Filabot systems. The temperature controller that we use on the Filabot systems is very simple to use once a user understands how it works. If you have any questions please contact us at Contact@filabot.com


Temperature Controller Overview

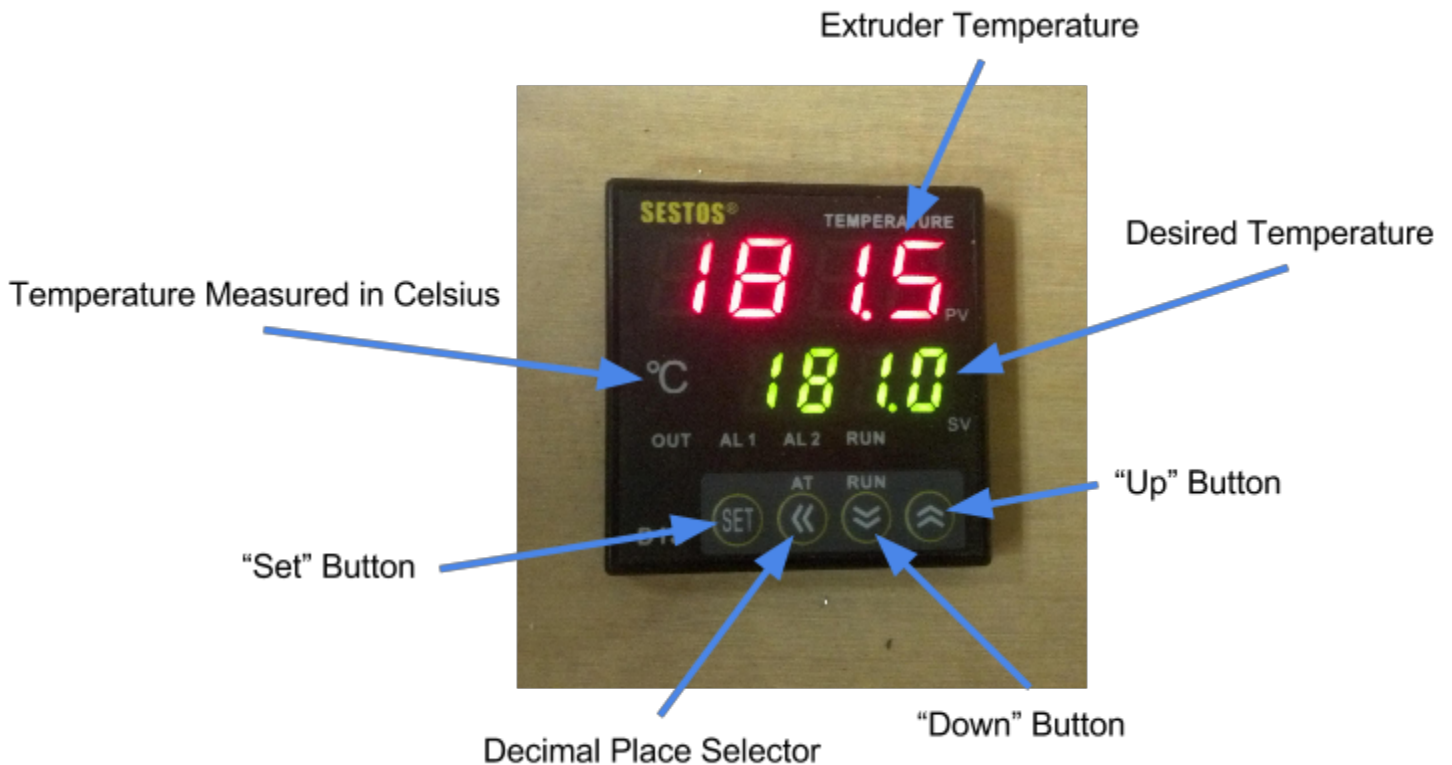


How To Set Temperature

Step 1: Turn on temperature controller using the “Temperature Control” switch. The temperature controller will light up.

Step 2: Press the “Up” or “Down” Buttons. This will make a dot blink in the bottom of the screen near the green numbers.

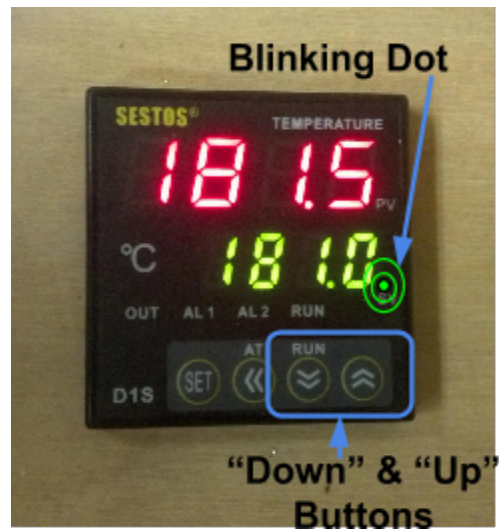

Step 3: Move the decimal, using the Decimal Place Selector, to the place that you would like to adjust the temperature.

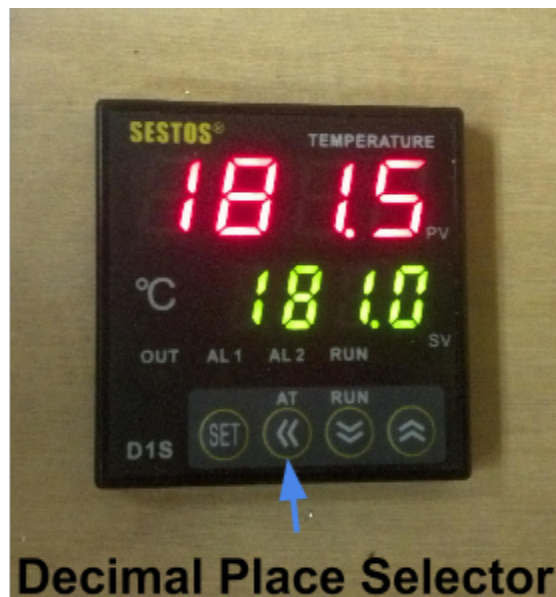

Step 4: Adjust the desired temperature using the “Up” and “Down” buttons.



“Down” & “Up” Buttons

Step 5: Once desired temperature is set, press the “Set” button to lock it in. Pressing once will change the green numbers to a countdown of the relay, pressing it again will change to display of the desired temperature. Repeat process to change or lower temperature.



“Set” Button